

# English Guide
# Part Names

- The number shown in each ▶ is the page number where the part's function and/or use are explained in Japanese.


## Front view

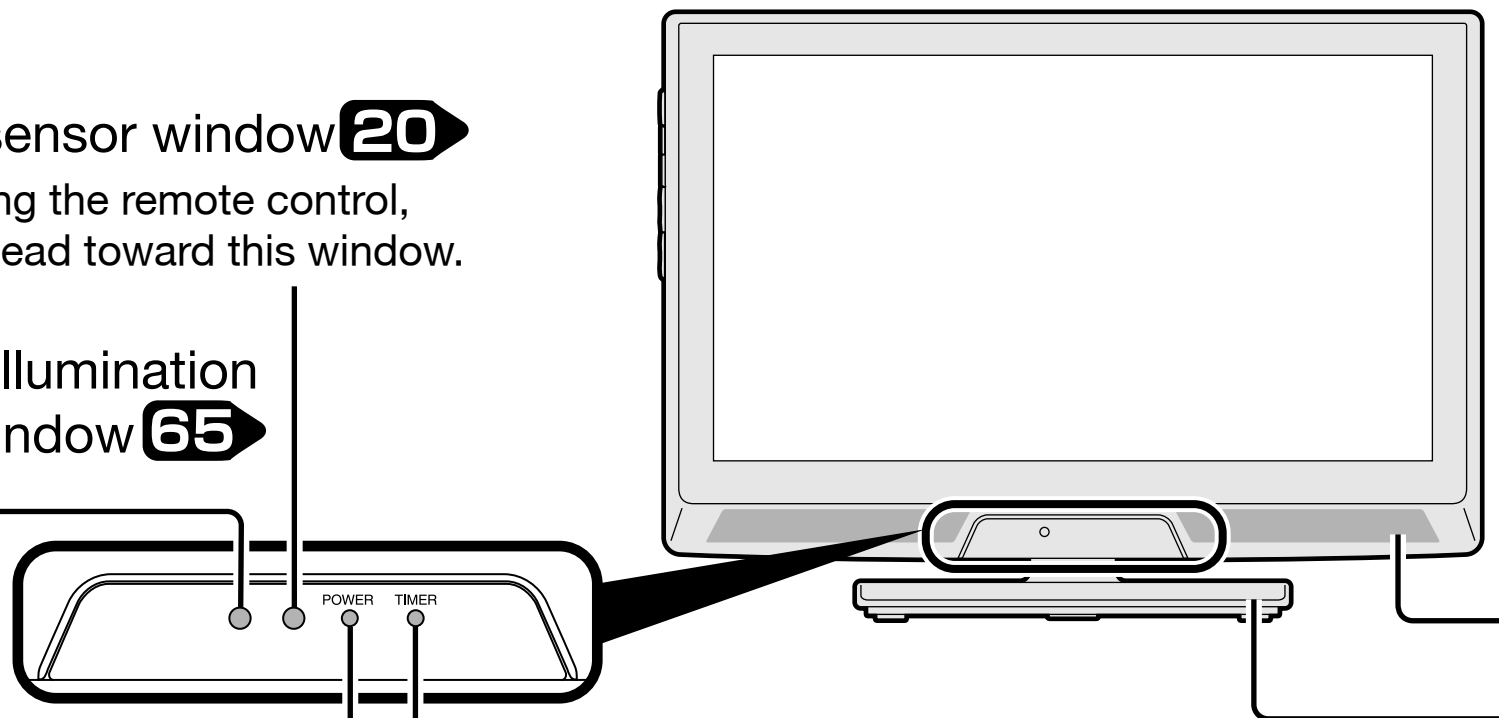


## Left side view

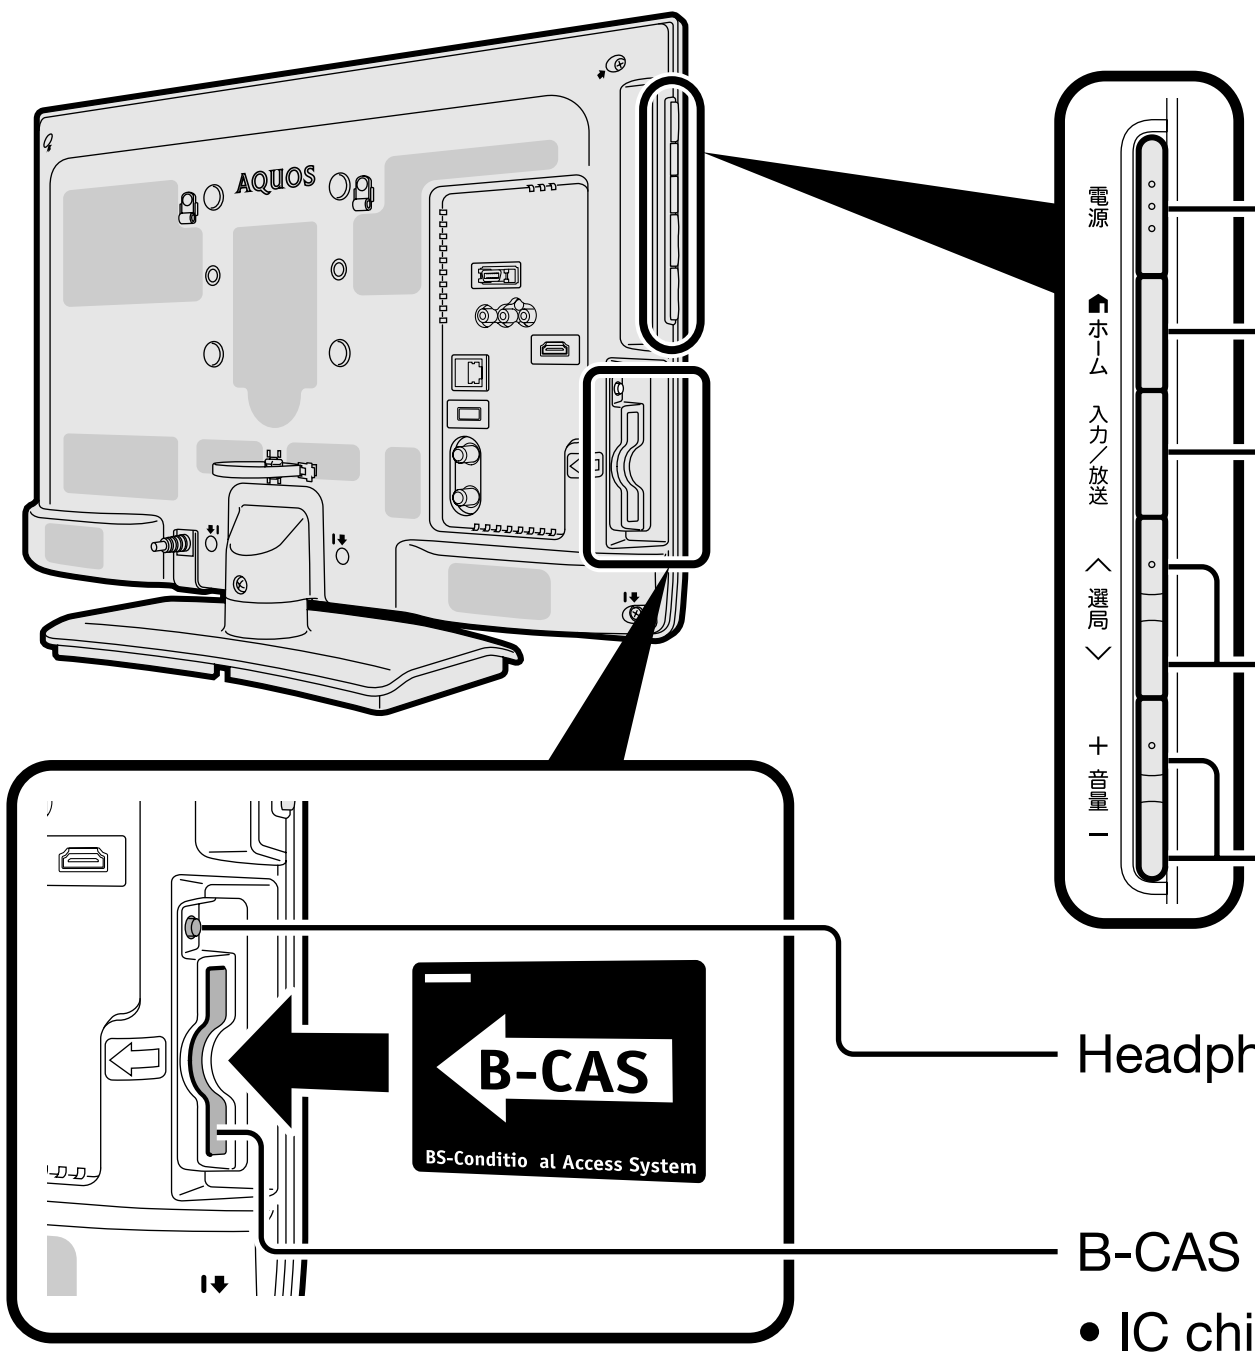

# Back view

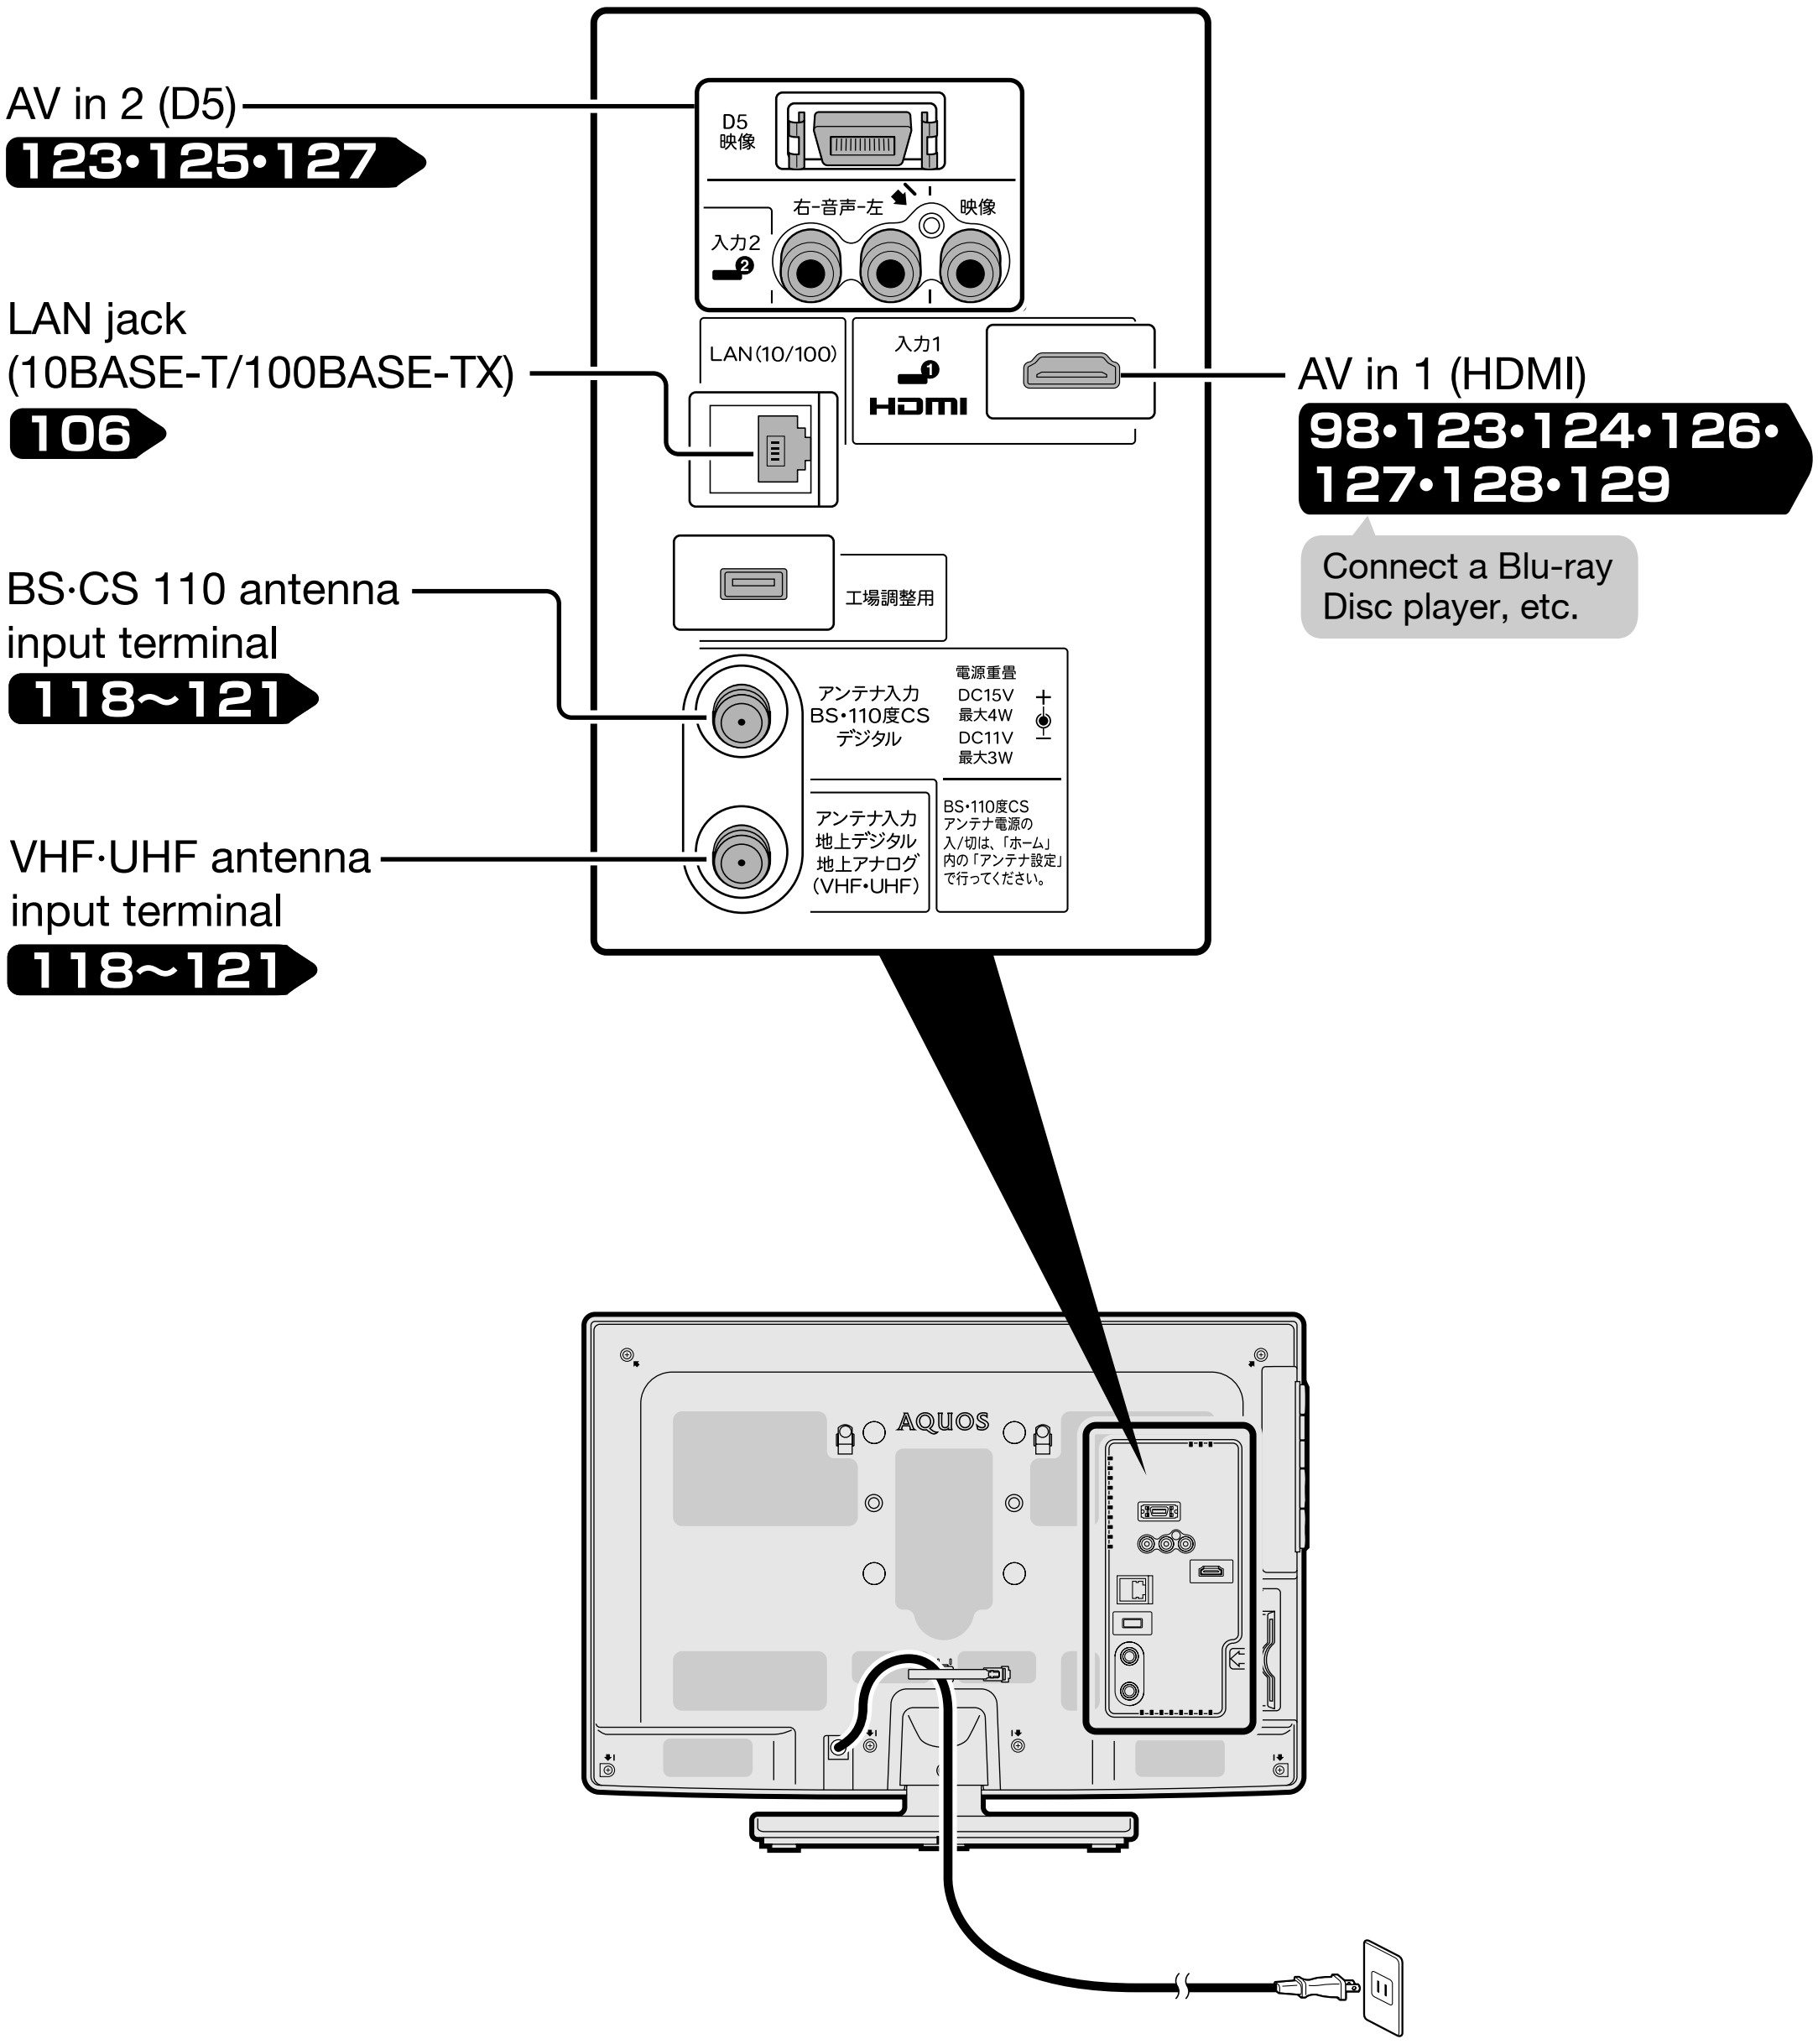





次のページに続く

# Remote Control Unit

See Page **28** for how to select a program.

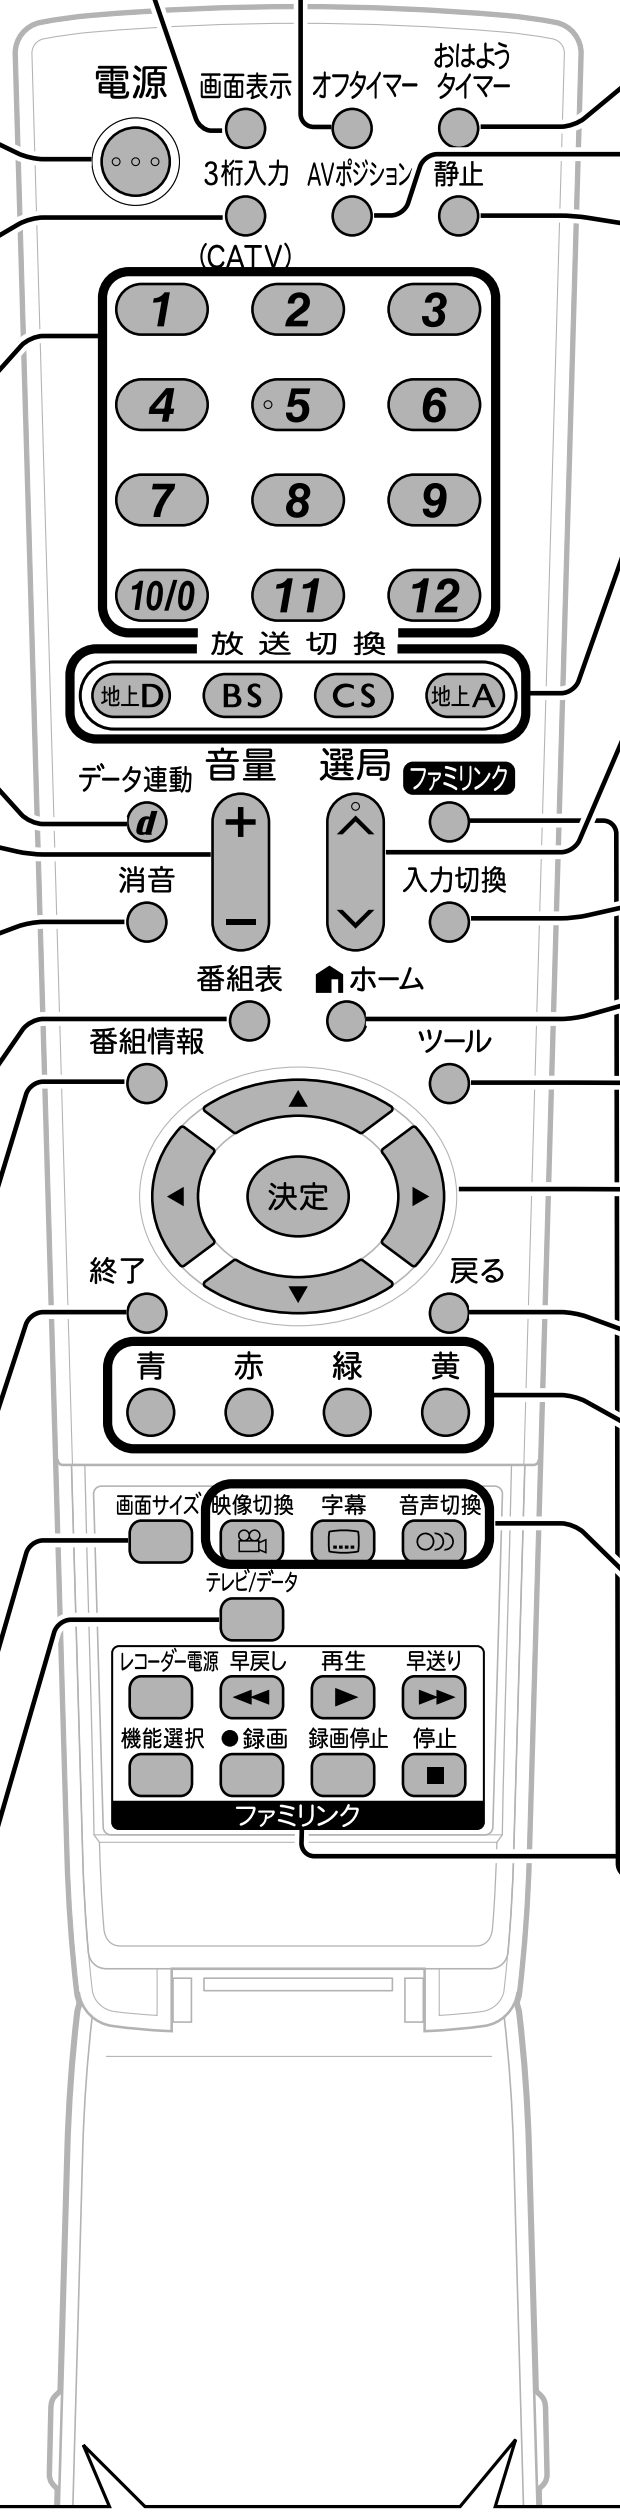


**Display** 32~33•171
Press to display or turn off the channel call, etc.

**Active/Standby** 21
Press to engage the TV set in the active or standby mode.

**Digital channel number input** 30
Use to select a digital channel by entering the 3-digit channel number.

**Channel select** 28
- Press to select a channel.
- Use to input a number for various settings.

**Linked data broadcast** 31

**Volume up (+)/down (–)** 28
Press to adjust the volume.

**Mute** 28
Press to temporarily turn off the sound. Press again to return the sound volume to the previous level.

**EPG** 41•83~84•94
Press to display or turn off the Electronic Program Guide (EPG: 番組表) when receiving a digital broadcast.
Select a future program in EPG to set a timer program.

**Program info** 33
Press to display detailed information on the current digital program.

**Finish**
Press to finish menu operation, etc.
* This button can be conveniently used when you are at a loss during menu or EPG operation, etc.

**Screen mode** 59•105
Press to select the desired screen mode.

**Media select** 28•31

**Sleep timer** 76

**Wake up timer** 56
Press to set wake up timer.

**AV mode select** 63

**Freeze** 38

**Terrestrial digital/BS/CS/ Terrestrial analog** 28
Select the CS digital channel for the first time. 135

**Channel up (∧)/down (∨)** 28•37
Press to select channels in the current network, media and CATV channels in the ascending or descending order.
* CATV channels are factory set to be skipped. 147

**Input select** 100

**Display the "Home" Menu** 22~23

**Display the Tool Menu** 22~23•27


**Cursor (up, down, left, right)** 22~23
**Enter/Confirm** 22~23

**Return** 22

**Color** 31•42~47•78
Use to operate EPGs and data program screens.

**Picture select** 50
**Caption** 51
**Audio select** 50• 52


**Familink** 90~93•95~98
Press to operate "Familink" Recorders connected via HDMI cables.

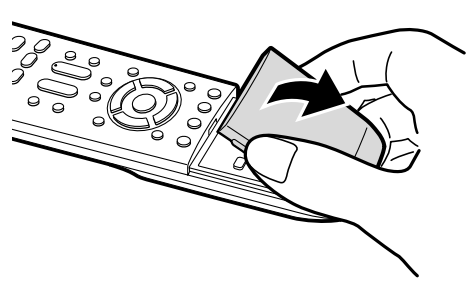

**To open the cover**
Hold the cover by the projections on both sides and lift upwards.

# Switching the Display Language to English
# ホームメニューなどの言語を英語にする

- Using the Home menu screen, you can switch the on-screen display language to English.
  ホームメニューなどの画面表示を英語にすることができます。

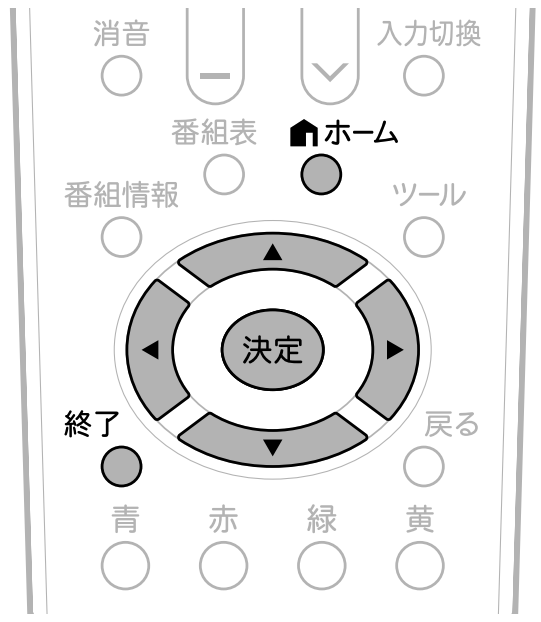


◇**おしらせ**◇

**誤ってホームメニューを英語にしてしまったときは**

- ホームメニューから「Setup」－「🔧 (View Setting)」－「言語 (Language)」を選んで決定し、「日本語」を選んで決定すると日本語になります。

## 1 Select "設定" (Setup) on the Home menu.
## ホームメニューから「設定」を選ぶ

Press ホーム and select with





## 2 Select "🔧(視聴準備)" (View Setting).
## 「🔧(視聴準備)」を選ぶ

Select with




## 3 Select "Language(言語)".
## 「Language(言語)」を選ぶ


Select with
Press 決定

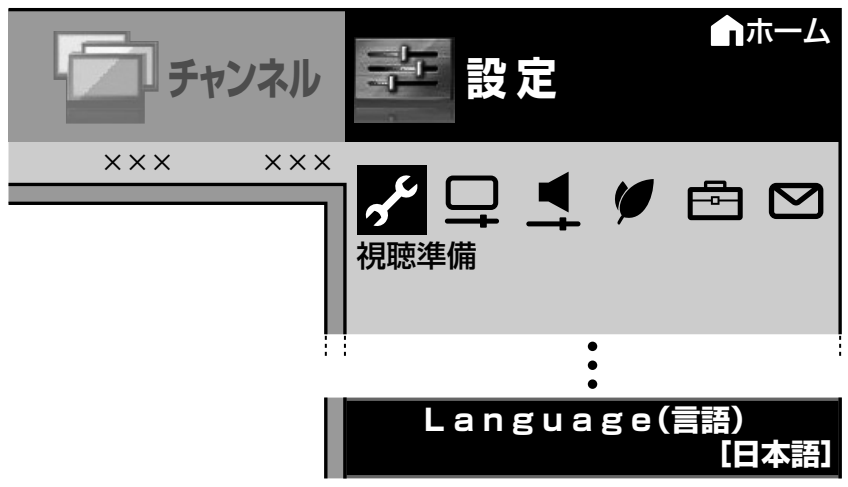


## 4 Select "English".
## 「English」を選ぶ

## Enter.
## 決定する

Select with
Press 決定

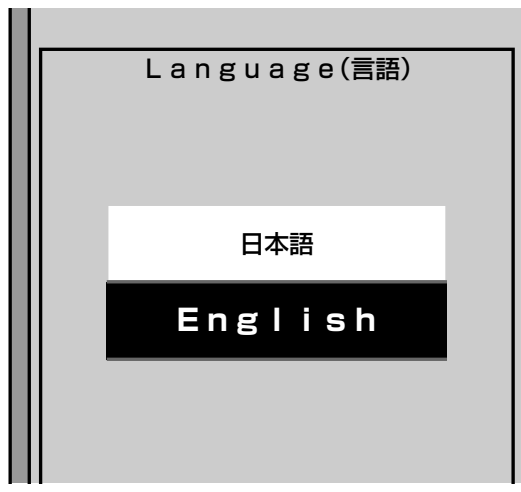


- The menu screen is now displayed in English.
- 画面表示が英語になります。

## 5 Finish this operation.
## 終了する

Press ホーム